


Phase III Sterling Tower Site Map

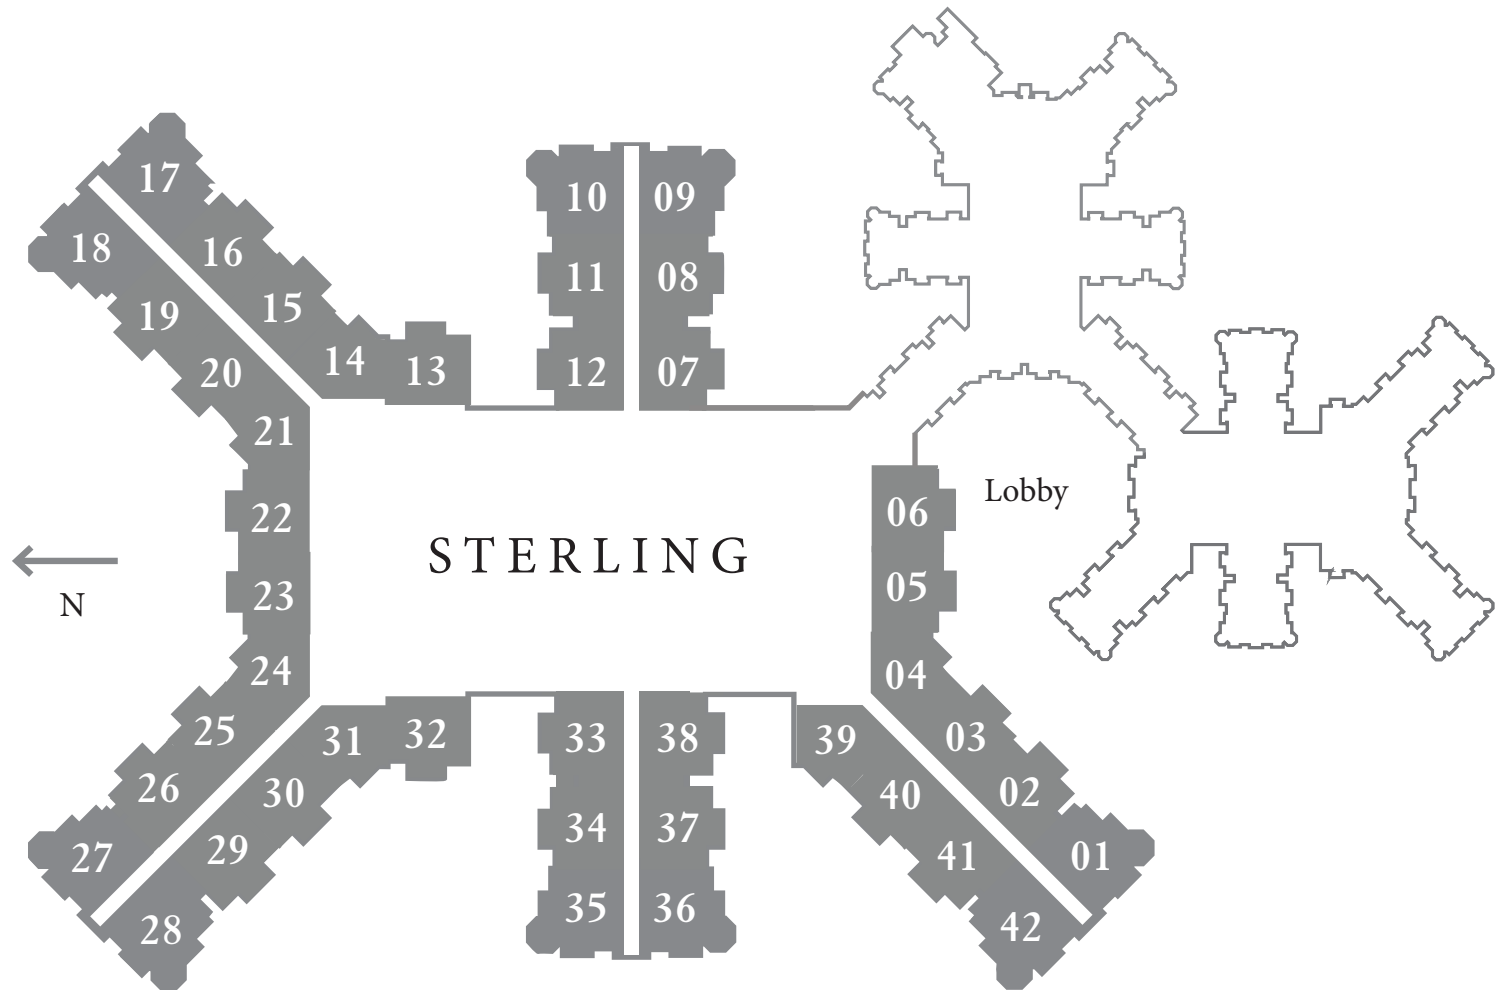

* Unit 06 is only in floors 2 to 7